


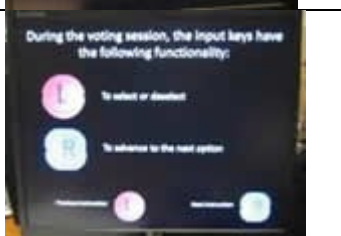
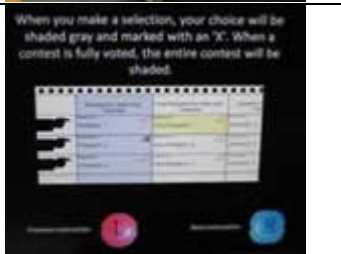





Using the Paddle Device

Using the Paddle Device	
<p>If requested, an Inspector will assist you using the paddle device with the ImageCast BMD.</p>	
<p>Once the paddle device is selected, a welcome screen is displayed.</p>	
<p>Instructions are provided on screen and or through headphones, depending on your preference</p>	
<p>You learn how contests and selections are made and how you can review your selections.</p>	
<p>Basically, you press the LEFT/ROUND/RED button to make ballot selections and</p>	
<p>press the RIGHT/SQUARE/BLUE button to move to the next candidate or screen.</p>	
<p>If no selection is made within a certain period of time, the instructions are repeated.</p>	
<p>You may request assistance from an Inspector at any time during the voting process by asking or holding up your hand.</p>	

When you are satisfied with all selections, a paper ballot is printed and deposited into a privacy sleeve.



Once printed, you may review the ballot through the scanner for verification.

